



MAINTENANCE

Steps	Detergent	Dilute	Diluted Coverage	Pads & Brushes
Initial Cleaning	Buckeye Blue	10 oz / gal water	360 sq ft / gal	Soft nylon brush
Routine Cleaning	Buckeye Blue	10 oz / gal water	360 sq ft / gal	Contact pad, purple pad or soft nylon brush
Heavy Soil Cleaning	Buckeye Liquid Shovel	32 oz / gal water	360 sq ft / gal	Stiff Scrub Brush



Broom



Wet Mop



Wet/Dry Vacuum



Buckeye Blue



Power Scrubber



SteamVac



Tornado

I. Cleaning Instructions

Initial Cleaning

1. Remove all surface soil, debris, sand and grit with a vacuum.
2. Scrub floor with **Buckeye Blue** Cleaner.
3. Pick up solution with a wet vacuum, rinse with clean water and allow to dry thoroughly.

Daily / Routine Cleaning

1. Sweep or vacuum floor to remove surface soil, debris, sand and grit.
2. Scrub floor with **Buckeye Blue** Cleaner.
3. Pick up solution with a wet vacuum, rinse with clean water and allow to dry thoroughly.
4. This process may be done in one or two steps with a Tornado BR 13.
5. Allow floor to dry thoroughly

Interim Maintenance – Every 3 – 6 months

1. Vacuum floor thoroughly
2. Dilute and Apply **Buckeye Liquid Shovel** with a mop and allow to stand for 20 minutes
3. Scrub using a power scrubber or buffer with a stiff scrub brush attachment
4. Pick up solution with mop, wet vacuum, SteamVac or Tornado BR 13.
5. Allow floor to dry thoroughly

Restorative Maintenance – Heavily Soiled

1. Vacuum floor thoroughly.
2. Dilute and Apply **Buckeye Liquid Shovel** with a mop and allow to stand for 20 minutes
3. Scrub using a power scrubber or buffer with a stiff scrub brush attachment
4. Pick up solution with mop, wet vacuum, SteamVac or Tornado BR 13
5. Allow floor to dry thoroughly



MAINTENANCE

II. Equipment Specifications

SteamVac Machine	Similar to any Hoover SteamVac model with scrubber and vacuum.
Tornado Machine	Model BR 13 with a 13 inch cleaning width is your best option to clean Infinity Flooring. It works well in large areas and is especially maneuverable around equipment. Tornado is available from Infinity Performance, Inc. at www.infinityperformance.com .
Power Scrubber	17 inch rotary floor buffer with mounted detergent tank and feed line to the brush. A circular brush attachment should be used.
Wet/Dry Shop Vacuum Unit	Power Unit: Minimum 1.7 hp commercial unit, 7.0 amp, 120vlt A.C., 50/60 Hz two stage bypass motor Tank Capacity: 10-25 gallon, lined stainless steel or polypropylene. Accessories: Extension wand with a 6 to 12 inch pickup nozzle, crevice tool, heavy-duty extension cord.
Detergent	Commercial/Industrial non-petroleum based neutral detergent. <ul style="list-style-type: none">• Buckeye Blue• Buckeye Liquid Shovel

IMPORTANT MAINTENANCE TIPS

- Use high CFM vacuum to pick up dust.
- For large areas, use the Tornado BR 13.
- Dilute the detergents with water per the manufacturers instructions; use higher concentrations for stubborn stains or hard to clean areas.
- Rinse, wet vacuum or mop up any detergent residue when cleaning the floor.
- For gum, use generic gum remover, however, any solvent-based product should be rinsed well with water to avoid damaging floor.
- **DO NOT** use an Auto Scrubber with a squeegee attachment. It tends to not pick up all of the dirty water solution and leaves a film of diluted dirty water on the tiles.
- **DO NOT** use petroleum or citrus based detergents.
- **G-Max** platforms may be cleaned the same as the Infinity Max tiles.

Contact Buckeye Blue Customer Care at 800-321-2583 for a distributor in your area.

Contact Infinity Performance at 888-479-1017 to purchase the Tornado BR 13

